

# 1B UNA FONT WITH UNDERCOUNTER BOILERS



1B UNA FONT 1000859		DIMENSIONS	SYSTEM SET-UP
<p>&gt; Space-saving countertop font</p>		<p>&gt; Four undercounter boiler options available</p>	

MIX UC3 1000880	MIX UC8 1000887	ECOSMART UC4 1000750	ECOBOILER UC4 1000740
	OR	OR	OR

FONT	NAME ORDER CODE	DIMENSIONS INCL. DRIP TRAY (D x W x H mm)	DIMENSIONS EXCL. DRIP TRAY (D x W x H mm)	TAP TO COUNTER (T mm)
	1b Una Font 1000859	168 x 120 x 287	138 x 30 x 287	233



BOILERS	PRODUCT INFO		WATER TYPE		SIZE DIMENSIONS		PERFORMANCE SPECS			PLUMBING & ELECTRICAL REQS	
	NAME ORDER CODE	MULTI-TEMP	ADJUSTABLE TEMP	DIMENSIONS (D x W x H mm)	IMMEDIATE DRAW OFF	L/HR	CUPS /HR	POWER @220v	PLUMBING REQS		
	MIX UC3 1000880	Y	Y	385 x 210 x 444	3L	28L	156	2.8kW	3/4" BSP		
	MIX UC8 1000887			385 x 210 x 617	8L						
	Ecosmart UC4 1000750	N	N	395 x 135 x 585	4L	24L	133	2.8kW			
	Eco boiler UC4 1000740										

PACKAGING	NAME ORDER CODE	PACKAGING DIMENSIONS (L x W x H mm)	PACKED WEIGHT	QTY / PALLET
	MIX UC3 1000880	450 x 290 x 540	11kg	18
	MIX UC8 1000887	450 x 290 x 700	14kg	24
	Ecosmart UC4 / Eco boiler UC4 1000750 / 1000740	510 x 240 x 690	11kg	30
	1b Una Font 1000878	290 x 570 x 215	2kg	30




## 1 BUTTON UNA FONT WITH MIX UC3/UC8

### COUNTER CUT-OUT WITH DRIP TRAY

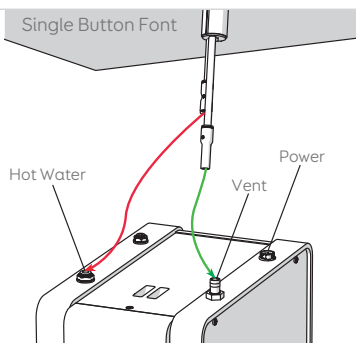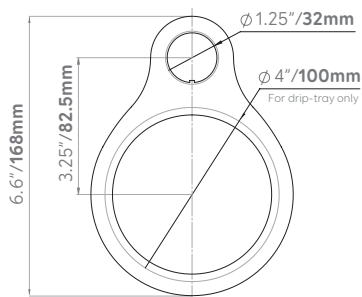


### 1b UNA FONT 1000859

#### MIX UC3 1000880

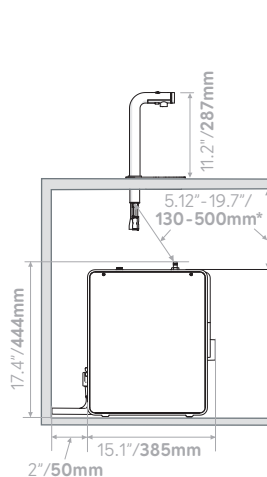

\* Hosing should be trimmed to ensure continuous drop from font to boiler

#### MIX UC8 1000887

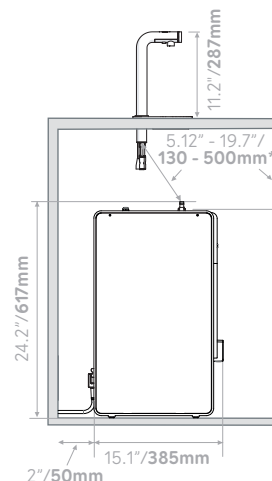

\* Hosing should be trimmed to ensure continuous drop from font to boiler

### VENTILATION REQUIREMENTS

50mm/1.9" clearance required at each side and back of machine if installed in an enclosed cabinet.

### ELECTRICAL INSTALLATION PROCEDURE

When installing the machine, always observe the local regulations and standards. The standard machine is supplied with a UK 3-pin plug. For EU models a 2-pin CEE-7 plug will be supplied. US models will be supplied with the suitable plug. A suitable mains power supply socket should be available within easy access of the appliance so that it can be disconnected easily after install.

### PLUMBING INSTALLATION PROCEDURE

- Ensure that the equipment is installed according to local plumbing & water regulations.
- Mains water pressure required (limits): 14.5 - 145psi (100 - 1000kPa, 0.1 - 1MPa).
- Requires inline water filter within your water specifications.
- The machine is supplied with a 3/4" BSP connection.
- Turn on the water to flush any impurities, dust etc from the inlet hose and water pipe. Allow several litres through. Especially for new installations.

- Connect the hose to the inlet valve of the boiler. Make sure a sealing washer is fitted.
- Turn on water and check for leaks.

### OPERATING BOILER FOR THE FIRST TIME

- Check that all installation procedures have been carried out.
- Ensure water valve is on.
- Plug boiler into suitable socket.
- Turn on the power switch.
- The "Wait" progress circle will be visible on the screen and the machine will fill to a safe level, above the elements, before heating.
- The "Ready" tick will come up on screen when the machine is full and up to normal operating temperature (approx. 10/20 mins.).
- The boiler is now ready for use - the display will show the button settings and the "Ready" status tick.
- The Boiler may now be used to dispense Hot Water to the preset factory settings.

**NOTE:** Because the boiler is electronically controlled no priming is necessary. The element cannot switch on until a safe level of water is reached.